

# Housing temperature transmitter 0-10 V

**Article number: 807001 0013**

The Testo Sensor housing transmitter is suitable for universal connection of resistance sensors and thermocouples. Resistance-based temperature probes (Pt100 / Pt1000) in two-, three- and four-wire technology as well as thermocouples can be connected. The transmitter supplies 0-10 V as an output signal. It is the ideal link between the temperature probe and your control system. Thanks to the innovative plastic housing with a tool-free rotary cover lock and the good use of space inside the transmitter, installation is quick and easy. Whether for a retrofit or new installation, our housing transmitter is optimally designed for use in plant and machine construction and features high accuracy, reliability, long-term stability and its robust product design.



Special features	
Inputs and outputs	<p>werkzeugfreie Montage durch innovativen Drehdeckelverschluss tool-free assembly due to innovative rotary lid lock</p> <p>Eingang: Pt100 / Pt 1000 Thermoelement Typ J, K, N, S oder T</p> <p>Input: Pt100 / Pt 1000 Thermocouple type J, K, N, S or T</p> <p>Ausgang: 0 - 10 V Output: 0 - 10 V</p>
Input: various resistance sensors and thermocouples Output: 0 to 10 V	
Accuracy and Long-term stability	<p>Accuracy: high measuring accuracy Long-term stability: long service life with flexible application possibilities</p>
Alarm function	<p>Sensor break monitoring Sensor short-circuit monitoring Measuring range monitoring</p>
Design	<p>compact, robust, vibration and shock resistant design</p>
Parametrization	<p>Simple and super-fast parameterization thanks to preset dip switches</p>

Input	Circuit diagram Output		
<p>You can connect different temperature probes to the input of the transmitter and then configure them via DIP switches. Please order the probes separately, we feel free to advise you if you have any questions.</p>			
Resistance sensors			
Measuring element	Norm	Configurable measuring range	Accuracy *1
Pt100	IEC 60751	-200 °C to +850 °C   -328 °F to +1562 °F	±0.3 °C + 0.1 %
Pt1000	IEC 60751	-200 °C to +850 °C   -328 °F to +1562 °F	±0.3 °C + 0.1 %
Connection type	2-wire, 3-wire and 4-wire   *1 of the measuring span		
Input Thermocouple			
Measuring element	Norm	Configurable measuring range	Accuracy *1
Type K (NiCr-Ni)	IEC 60584	-200 °C to +1350 °C   -328 °F to +2462 °F	±0.3 °C + 0.1 %
Type J (Fe-CuNi)	IEC 60584	-200 °C to +1000 °C   -328 °F to +1832 °F	±0.3 °C + 0.1 %
Type T (Cu-CuNi)	IEC 60584	-200 °C to +400 °C   -328 °F to +752 °F	±0.3 °C + 0.1 %
Type N (NiCrSi-NiSi)	IEC 60584	-100 °C to +1300 °C   -148 °F to +2372 °F	±0.3 °C + 0.1 %
Type S (Pt10Rh-Pt)	IEC 60584	-50 °C to +1750 °C   -58 °F to +3182 °F	±0.3 °C + 0.1 %

Input impedance: >10 MΩ | Max. wire loop resistance: 500 Ω (incl. thermocouple) | Cold Junction Compensation: Internal by means of NTC 5K (-40 °C - 85 °C ±0.2 °C) | \*1 of the measuring span

MWA / KS / 21.06.2024

## Testo Sensor GmbH

Testo-Straße 1  
D-79853 Lenzkirch

+49 7653 96597-0  
+49 7653 96597-99

info@testo-sensor.de  
www.testo-sensor.de


You can find our standard portfolio in our  
webshop at: [www.testo-sensor.shop](http://www.testo-sensor.shop)

Output		Circuit diagram Output	
Output type	analog, temperature linear for RTD & TC		
Output signal	0 to 10 V		
Parametrization / Scaling	Configurable via DIP-Switch		
Resolution	16 bit dac		
Accuracy (°C)	0,1		
Load	500 Ω at 24 VDC		
Connection type	3-wire and 4-wire		

Sensor monitoring & sensor error		Measured values outside the measuring range	
Sensor failure effects	according to NAMUR NE43	Sensor Status	0 - 10 V
<b>Alarms</b>		Min. measured value	0 V
Sensor error	0 - 10 V	Max. measured value	10 V
Sensor Status	11 V	Underrange	0 V
Sensor short circuit	11 V	Overrange	10,5 V
<b>Time response</b>		<b>Accuracy and stability</b>	
Closing time (s)	≤ 5	<b>Cold junction compensation</b>	
Signal attenuation (s)	0 – 30	Cold Junction Compensation	±0,3 – 0,5 °C (NTC 5K)
Measuring cycle (s)	<0,25 ( <4 Hz )	Temperature influence	±0,01 °C per °C
Response time	Depending on sensor type		

Influence of the sensor cable	
RTD and resistance (2-wire)	In two-wire circuits, the inherent resistance of the connecting lead adds to the resistance value of the measuring resistor (thermistor or Pt) and thus falsifies the measurement result. For this reason, we recommend the two-wire technique in conjunction with small-resistance measuring resistors only if you can use comparatively short connecting leads, i.e. small-resistance connecting leads.
RTD and resistance (3-wire)	Negligible, with equal wire resistance
RTD and resistance (4-wire)	Negligible
Thermocouples and Voltage	Negligible
Further data	
Supply voltage influence	Within specified limits

Ambient conditions	
Ambient Temperatur	Storage: -20 °C to +70 °C (housing) Operating: -20 °C to +70 °C (housing)
Humidity (%rH)	0 to 98 (non-condensing)
Protection	Housing IP65
EMC	
Standard	Directive: 2014/30/EU   Harmonized standards: EN 61326-1:2013
Type	
Dimensions (mm)	105 x 60 x 34 (see drawing)
Material   Flammability	ABS white RAL 9010 UV resistant, RoHS compliant
Mounting	Enclosed mounting kit (housing)
Connection	Single wires, max. 1,5 mm <sup>2</sup> , AWG 16
Weight (g)	68

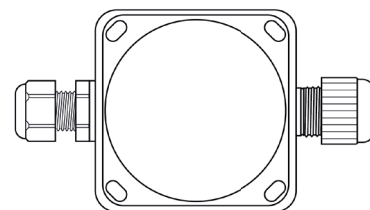

MWA / KS / 21.06.2024

**Testo Sensor GmbH**

Testo-Straße 1  
D-79853 Lenzkirch


+49 7653 96597-0  
+49 7653 96597-99

info@testo-sensor.de  
www.testo-sensor.de

You can find our standard portfolio in our  
webshop at: [www.testo-sensor.shop](http://www.testo-sensor.shop)

**Factory settings**

Temperaturtransmitter für Kabelfühler (RTD Sensoren)  
 Werkseinstellungen: Sensor Pt100 Skalierung: 0 .. 100 °C  
 Temperature transmitter for cable probes (RTD sensors)  
 Factory settings: Sensor Pt100 Scaling: 0 ... 100 °C

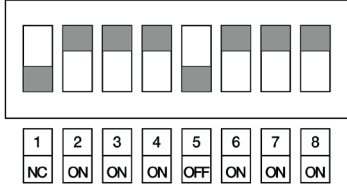

**Factory configuration**

Input	Pt100
Scaling	0 °C to +100 °C

**General data**

Isolation	none
Supply Voltage (VDC)	12 to 36, polarity protected

**Delivery**

Transmitter, Instruction manual, individually packed in PE bag


**Matching accessories**

Designation	Order no.
DIN rail power supply	On request
Table power supply	On request
Matching cable probe	in the Webshop: <a href="http://testo-sensor.shop">testo-sensor.shop</a>
Matching Screw-in probes	in the Webshop: <a href="http://testo-sensor.shop">testo-sensor.shop</a>
Suitable contact probes	in the Webshop: <a href="http://testo-sensor.shop">testo-sensor.shop</a>
Matching connection cables	in the Webshop: <a href="http://testo-sensor.shop">testo-sensor.shop</a>


**Technical drawing**

All dimensions in mm


**Front view**

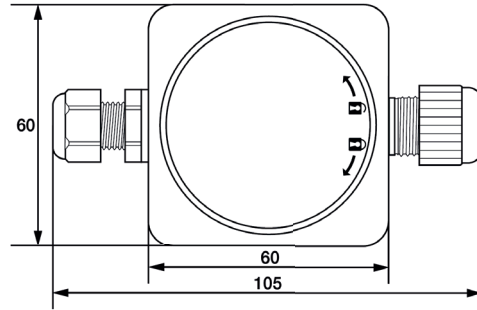

**Rear view**

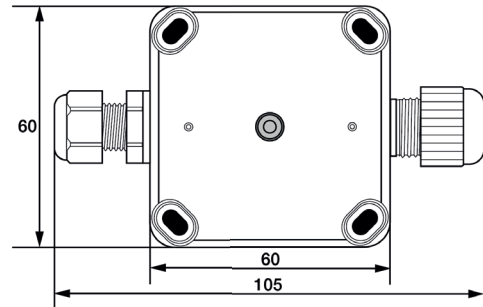

**Side view**

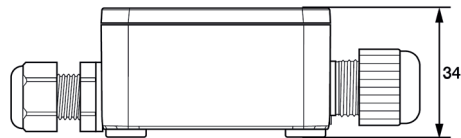


**Mounting**

Thanks to the four slotted holes, the housing can be easily mounted to the wall. The openings for the screws are located outside the protective space for the electronics, so there is no need for sealing. With the cable compression glands, sealing to the probe or data cable is guaranteed even for different diameters.

Mounting material for the installation of the transmitter (screws and dowels) are included with the transmitter as free accessories. A large assortment of temperature probes and connecting cables are also available as an option.

**Bohrschablone**

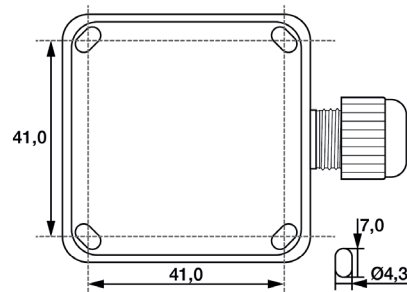

MWA / KS / 21.06.2024

**Testo Sensor GmbH**




Testo-Straße 1  
 D-79853 Lenzkirch

+49 7653 96597-0  
 +49 7653 96597-99

info@testo-sensor.de  
[www.testo-sensor.de](http://www.testo-sensor.de)

You can find our standard portfolio in our  
 webshop at: [www.testo-sensor.shop](http://www.testo-sensor.shop)

**Mounting**

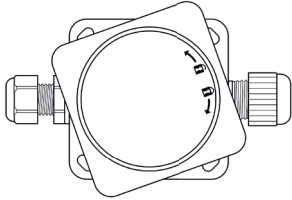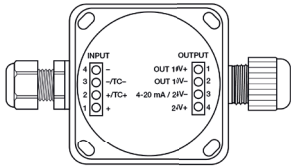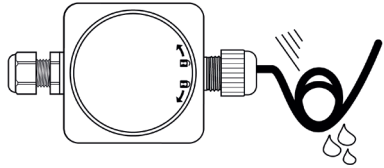Open the rotary cover.

Connect the required measuring element to the input according to the assignment diagram. (Suitable measuring element NOT included, can be found in our store.) Then you can parameterize input and output via the DIP switches.

Please lay the cable with reserve loop and in such a way that no water can penetrate into the sensor head. This allows you to extend the probe without disconnecting the electrical connection.

**Pin assignment input and output**

Input RTD sensors	Pt1000 2w Pt100 2w	Pt1000 3w Pt100 3w	Pt1000 4w Pt100 4w		Output	Output 0-10V 3w
	4 <input type="radio"/> rt rd 3 <input type="radio"/> ws wh 2 <input type="radio"/> rt rd 1 <input type="radio"/>	4 <input type="radio"/> rt rd 3 <input type="radio"/> rt rd 2 <input type="radio"/> ws wh 1 <input type="radio"/>	4 <input type="radio"/> rt rd 3 <input type="radio"/> rt rd 2 <input type="radio"/> ws wh 1 <input type="radio"/>			4 <input type="radio"/> 24V+ 3 <input type="radio"/> 24V- Out 10V- 2 <input type="radio"/> 1 <input type="radio"/> Out 10V+
Input thermocouples	TC Type J	TC Type K	TC Type N	TC Type S	TC Type T	Output 0-10V 4w
	4 <input type="radio"/> ws wh 3 <input type="radio"/> sw bl 2 <input type="radio"/> 1 <input type="radio"/>	4 <input type="radio"/> ws wh 3 <input type="radio"/> gn gn 2 <input type="radio"/> 1 <input type="radio"/>	4 <input type="radio"/> ws wh 3 <input type="radio"/> rs pk 2 <input type="radio"/> 1 <input type="radio"/>	4 <input type="radio"/> ws wh 3 <input type="radio"/> rt rd 2 <input type="radio"/> 1 <input type="radio"/>	4 <input type="radio"/> br bn 3 <input type="radio"/> rt rd 2 <input type="radio"/> 1 <input type="radio"/>	4 <input type="radio"/> 24V+ 3 <input type="radio"/> 24V- 2 <input type="radio"/> Out 10V- 1 <input type="radio"/> Out 10V+

With the DIP switches of the transmitter you can configure the transmitter according to your needs. DIP switch 1 is not assigned. Just leave it in the position. With DIP switches 2-4 you can define which measuring element you have connected to the input. Switches 5-8 are used to set the scaling and the measuring range. For the exact configuration please refer to the adjacent table.

Setting the input signal	Bit 1	Bit 2	Bit 3	Bit 4	Sensor
nc	off	on	on	on	Pt100
		on	on	on	Pt1000
		off	on	on	TE Type K
		on	off	on	TE Type J
		on	on	off	TE Type T
		off	on	off	TE Type N
		on	off	off	TE Type S
		off	off	off	Pt100

**Einstellen der Skalierung via DIP-Schalter**  
Setting the scaling range via DIP switch

on	on	on	on		Scaling Range
					0 .. +50°C
Bit 5	Bit 6	Bit 7	Bit 8		0 .. +100°C
on	on	on	on		0 .. +150°C
off	on	on	on		0 .. +200°C
on	off	on	on		0 .. +250°C
off	off	on	on		0 .. +400°C
on	on	off	on		0 .. +600°C
off	off	off	on		0 .. +800°C
on	on	on	off		0 .. +1.000°C
off	on	on	off		0 .. +1.200°C
on	off	on	off		-20 .. +50°C
off	off	on	off		-20 .. +120°C
on	on	off	off		-30 .. +70°C
off	on	off	off		-50 .. +50°C
on	off	off	off		-50 .. +150°C
off	off	off	off		-200 .. +50°C

MWA / KS / 21.06.2024

**Testo Sensor GmbH**

Testo-Straße 1  
D-79853 Lenzkirch

+49 7653 96597-0  
+49 7653 96597-99

info@testo-sensor.de  
www.testo-sensor.de

You can find our standard portfolio in our  
webshop at: [www.testo-sensor.shop](http://www.testo-sensor.shop)