

Room humidity transmitter 0-10 V

Article number: 801110 1023

Our room humidity transmitter with a voltage output of 0-10 V can be easily installed using screws. This device measures the humidity and optionally the temperature. The 0-10 V room humidity transmitter is ideal for the precise measurement of humidity and temperature in indoor spaces such as offices, supermarkets and schools.

Supply and output		
Output 0 - 10 V		
Power consumption < 1,1 VA / 24 V DC; < 2,2 VA / 24 V AC		
Voltage supply 24 V AC (± 20 %) 15 - 36 V DC		
Connection type	See connection diagrams	

General information		
Load resistance	RI > 5 kOhm	
Sensors	Digital humidity sensor, optionally with integrated temperature sensor	

Humidity			
Measuring element humidity Digital humidity sensor (low hysteresis, high long-ter			
Measuring range humidity 0 % RH to 100 % RH			
Output humidity	0-10 V		
Accuracy humidity	± 2.0 % (20 % RH to 80 % RH) at +25 °C, otherwise ± 3.0 %		
Long-term stability	± 1 % / year		

Temperature		
Measuring element Temperature	Pt1000, DIN EN 60751, Class B	
Measuring range temperature	0 °C to +50 °C	
Output temperature	0 - 10 V	
Accuracy temperature	typically ± 0.2 K at +25 °C	

Ambient conditions		
Storage temperature	-25 °C to +50 °C	
Operating temperature	-5 °C to +55 °C	
Permissible air humidity	0 % RH to 95 % RH (without condensation)	

Certifications / Standards			
Protection class III (according to EN 60 730)			
Protection type	IP 30 according to EN 60 529		
Standards	CE conformity electromagnetic compatibility according to EN 61326 according to EMC Directive 2014/30/EU		

S4S REGELTECHNIK

Configurable options

M - Measured variable



Housing		Drilling template
Material	Plastic Material ABS	85
Dimensions (L/W/H) (mm)	85 x 85 x 27	
Color	Pure white (similar to RAL9010)	
Electrical connection	0.14 - 1.5 mm², via screw terminals on circuit board	
		85

Your order code		M - Measured variable			
Article number	Measured variable	code	Measured variable	Delivery and Packing	
801110 1023		M1	% RH (Relative humidity)	Packing	individually packed in cardboard box
		M2	°C + % RH (Temperature and relative humidity)	Delivery	Transmitter, Operating instructions

Configurable options M - Measured variable 85 27,2 85 85




Important assembly instructions

For precise measurement of room temperature and humidity, it is crucial to take into account both the temperature dynamics and the humidity dynamics in the room. Air circulation should only take place through the openings in the housing cover. Therefore, the transmitter should be installed away from objects or obstacles that could block air movement. Also avoid uncontrolled air currents (draughts) by installing the transmitter near doors or windows. The transmitter should also not be installed on the colder outside wall to prevent measurement inaccuracies.


The device should only be used in pollutant-free, non-condensing air (< 95 $\,\%$ RH).

When connecting several probes to a common 24 V AC power supply, pay attention to the polarity to avoid short circuits. Please note that the voltage outputs are short-circuit-proof, but an overvoltage or the application of the power supply to the voltage output can destroy the device.

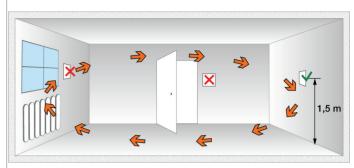

Circuit diagrams and assignment (Please also read the operating instructions before connecting the transmitter)

Wiring diagram

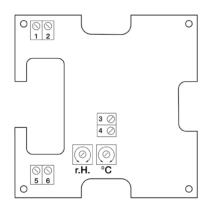

Assignment % RH

- 1 = +UB 24V DC
- 2 = Output Humidity 0-10 V
- 3 = free
- 4 = UB GND

Assignment °C + % RH

- 1 = +UB 24V DC
- 2 = Output Humidity 0-10 V
- 3 = Output temperature 0-10 V
- 4 = UB GND
- 5 = passive sensor (optional)
- 6 = passive sensor (optional)

Please observe the operating instructions for correct connection

webshop@testo-sensor.de